



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TEXT	
VOL+	VOL+
VOL-	VOL-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
TV	TV/DTV
INFO	INFO
EPG	EPG
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
PAUSE	SHIFT+ 
REC	SHIFT+RED

[illegible]