



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
10+	-/--
V – MODE	
ZOOM	
SUBTITLE	
TEXT/TITLE	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
GOTO	BACK
INFO/OSD	INFO
EPG/PBC	EPG
FAV / P/N	FAV

ORIGINAL	SUPERIOR
SLOW	
RED / PROG	RED
GREEN / STEP	GREEN
YELLOW/REPEAT	YELLOW
BLUE / A – B	BLUE
AUDIO	SHIFT+MUTE
SETUP	SHIFT+MENU
VOCAL	SHIFT+1
ANGLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
EJECT	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

