



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
LIST	-/--
CONTEXT	
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
SLEEP	SLEEP
TV	TV/DTV
i	INFO
EPG	EPG
RED	RED
GREEN	GREEN
YELLOW	YELLOW

ORIGINAL	SUPERIOR
BLUE	BLUE
	SHIFT+POWER
AUDIO	SHIFT+MUTE
HELP	SHIFT+6
SUBT.	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
<	SHIFT+LEFT
>	SHIFT+RIGHT
RADIO	SHIFT+TV/DTV
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PUASE	SHIFT+YELLOW
FWD	SHIFT+BLUE

