



ORIGINAL	SUPERIOR
	POWER
X	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTION	/ AV
GO TO	-/--
OSD	
ZOOM	
ANGLE	
SUBTITLE	
VOLUME (LEVEL) +	VOL+
VOLUME (LEVEL) -	VOL-
SKIP (CHANNEL) NEXT	P+
SKIP (CHANNEL) PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
ST. / MONO	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROG.	EPG
VOL. (LEVEL) – MODE	FAV
EJECT	
STOP	
SEARCH (FREQ.) - REW	GREEN
PLAY	YELLOW
SEARCH (FREQ.) - FWD	BLUE
TIMER / ON/OFF	SHIFT+POWER
AUDIO	SHIFT+MUTE
BAND	SHIFT+AV
PRO SCAN	SHIFT+ -/--
SETUP	SHIFT+
VIDEO EQ.	SHIFT+
REPEAT	SHIFT+BACK
	SHIFT+SLEEP
A – B	SHIFT+INFO
STORE	SHIFT+EPG

