



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
MODE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / AV
10+	-/--
DISPLAY	
GOTO	
SETUP	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT / DEL.	BACK
STEP	SLEEP
TV / RADIO	TV/DTV
TITLE	INFO
PRO / EPG	EPG
FAV	FAV

[illegible]