



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
10 / 0	0
SOURCE	/ AV
10+	-/--
OSD	
GO TO	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TITLE	INFO
PROG.	EPG

ORIGINAL	SUPERIOR
ANGLE	FAV
OPEN / CLOSE	
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
PBC	SHIFT+1
N / P	SHIFT+2
L / R	SHIFT+3
A-B	SHIFT+4
V-MODE	SHIFT+
ZOOM	SHIFT+
SLOW	SHIFT+LEFT
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
LANGUAGE	SHIFT+FAV

