



ORIGINAL	SUPERIOR
ON	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV PRESET	/ SOURCE
TEST	-/--
DISP	
TONE	
L. NITE	
THX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
SLEEP	SLEEP
SPEAKERS A	TV/DTV
SPEAKERS B	FAV
OFF	SHIFT+POWER
CD	SHIFT+1

ORIGINAL	SUPERIOR
DISC	SHIFT+2
DVD	SHIFT+3
EXT 7.1 / 5.1	SHIFT+4
SAT	SHIFT+5
TAPE	SHIFT+6
TUNER	SHIFT+7
VCR	SHIFT+8
VIDEO 4	SHIFT+9
VIDEO 5	SHIFT+0
VIDEO 6	SHIFT+ -/--
SUB+	SHIFT+ VOL+
SUB -	SHIFT+ VOL -
PRESET+	SHIFT+ P+
PRESET -	SHIFT+ P -
SURR+	SHIFT+UP
SURR -	SHIFT+DOWN
CENTER -	SHIFT+LEFT
CENTER+	SHIFT+RIGHT

