

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU / PBC	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / 10	0
DVD / DVB	 / SOURCE
+10	-/--
VIDEO	
ZOOM	
SUBTITLE	
TTX / TITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT / FAV -	LEFT
RIGHT / FAV+	RIGHT
ENTER	OK
RETURN	BACK
TIME	SLEEP
TV / RADIO	TV/DTV

ORIGINAL	SUPERIOR
OSD	INFO
EPG / PROG.	EPG
L / R	FAV
OPEN / CLOSE	 / NET TV
PAUSE	
STOP	 / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SETUP	SHIFT+MENU
USB / CARD	SHIFT+ 
N / P	SHIFT+ -/--
ANGLE	SHIFT+ 
LANGUAGE	SHIFT+ 
SLOW	SHIFT+RIGHT
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
A - B	SHIFT+INFO

