



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU / SETUP	MENU
RETURN / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
0 / 10	0
USB	/ SOURCE
10+	-/--
V-MODE	
ZOOM	
GO TO	
TEXT / TITLE	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
DVD / DVB	TV/DTV
INFO / OSD	INFO
EPG / PROG.	EPG

ORIGINAL	SUPERIOR
FAV / CLEAR	FAV
SLOW	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
MENU / PBC	SHIFT+MENU
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
TV / RADIO	SHIFT+ TV/DTV
EJECT	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REV.	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

