



ORIGINAL	SUPERIOR
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
10+	-/--
DISPLAY	
ZOOM	
ANGLE	
LANGUAGE	
+ / VOL+	VOL+
- / VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
A – B	SLEEP
VIDEO/MODE	TV/DTV
PROG.	EPG
PBC	FAV
OPEN/CLOSE	 / NET TV
STOP	 / SMART VIDEO

[illegible]