



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
PROG. / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
USB	-/--
DISPLAY	
ZOOM	
SETUP	
TITLE / TTX	
VOL+	VOL+
VOL-	VOL-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TIME	SLEEP
TV / RAD.	TV/DTV
EPG	EPG
FAV	FAV
RED	RED

ORIGINAL	SUPERIOR
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
LANGUAGE	SHIFT+MUTE
P / N	SHIFT+
A - B	SHIFT+
ANGLE	SHIFT+
SUBTITLE	SHIFT+
SKIP PREV.	SHIFT+ P+
SKIP NEXT	SHIFT+ P -
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
L / R	SHIFT+TV/DTV
SLOW	SHIFT+EPG
OPEN / CLOSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REV	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

