



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	-/--
TTX.	
+	VOL+
-	VOL-
	P+
	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
A / B	TV/DTV
EPG	EPG
A > B	FAV
 	
RED / AUDIO	RED
GREEN / TIMER	GREEN
YELLOW / LAST	YELLOW

[illegible]