



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
10+	-/--
OSD	
ZOOM	
SETUP	
SUB - T	
SKIP NEXT	P+
SKIP PREV	P -
UP/CH+	UP
DOWN/CH -	DOWN
LEFT/VOL -	LEFT
RIGHT/VOL+	RIGHT
ENTER	OK
RETURN	BACK
STEP	SLEEP
TV	TV/DTV
EDIT	INFO
PROG	EPG
SCART	FAV

ORIGINAL	SUPERIOR
OPEN/CLOSE	/ NET TV
STOP	/ SMART
REC	RED
REW	GREEN
PLAY/PAUSE	YELLOW
FWD	BLUE
TIMER	SHIFT+POWER
AUDIO	SHIFT+MUTE
ERASE	SHIFT+
ZOOM	SHIFT+
FINALIZE	SHIFT+
REC MDOE	SHIFT+
REPEAT A - B	SHIFT+BACK
SLOW	SHIFT+SLEEP
PAL/NTSC	SHIFT+TV/DTV
PRO DISC	SHIFT+INFO
DVD	SHIFT+EPG
ANGLE	SHIFT+FAV

