



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AM/FM	/ SOURCE
PROGRAM	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP/PRESET	UP
DOWN/PRESET	DOWN
LEFT/SCH	LEFT
RIGHT/SCH	RIGHT
OK	OK
ST/MO INTRO	INFO
FUNCTION	EPG
P.SCAN	FAV
EJECT	/ NET TV

ORIGINAL	SUPERIOR
PAUSE	
STOP	/ SMART
ANGLE	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
PLII	SHIFT+1
A - B	SHIFT+2
A - TIME	SHIFT+
MEMORY	SHIFT+
PN	SHIFT+
SLOW	SHIFT+LEFT
REPEAT	SHIFT+BACK
CHANNEL	SHIFT+TV/DTV
AUTO SCH TITLE PBC	SHIFT+RED

