



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
---	-/--
SUB	
VOL+	VOL+
VOL -	VOL -
PR+	P+
PR -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK/LIST	OK
← PR	BACK
TV/RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
ASPECT	 / NET TV
RED/FIND	RED
GREEN/AD	GREEN

[illegible]