



ORIGINAL	SUPERIOR
	POWER
	MUTE
/ MENU	MENU
/ EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
V – FORMAT	
RESOLUTION	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RECALL	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
RED / 	RED
GREEN / 	GREEN
YELLOW / 	YELLOW
BLUE / 	BLUE
	SHIFT+
	SHIFT+
	SHIFT+
	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
P >>	SHIFT+UP
<< P	SHIFT+DOWN
	SHIFT+BACK
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

