



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
+10	-/--
SET	
GOTO	
DVD/DVB SETUP	
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
SLOW	BACK
TIME	SLEEP
DVB – T	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
LCD ON/OFF	SHIFT+POWER
AUDIO	SHIFT+MUTE
DVD	SHIFT+1
TV	SHIFT+2
FM/AM	SHIFT+3
ZOOM	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
TVR	SHIFT+TV/DTV
TITLE	SHIFT+INFO
A – B	SHIFT+FAV
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REW/SEEK -	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD/SEEK+	SHIFT+BLUE

