



ORIGINAL	SUPERIOR
POWER	POWER
MUTING	MUTE
TAPE 1	1
TAPE 2	2
CD	3
PHONO	4
TUNER	5
VIDEO 1	6
VIDEO 2	7
VIDEO 3	8
MULTI SOURCE	 / SOURCE
DISC	-/--
VOLUME UP	VOL+
VOLUME DOWN	VOL -
CD SKIP NEXT	P+
CD SKIP PREV	P -
REAR LEVEL UP	UP
REAR LEVEL DOWN	DOWN
CENTER LEVEL DOWN	LEFT
CENTER LEVEL UP	RIGHT
TEST	OK
DELAY TIME	BACK
SLEEP	SLEEP
SURROUND MODE	TV/DTV
CLASS PRESET	INFO

ORIGINAL	SUPERIOR
SPEAKER REMOTE	EPG
SPEAKERS MAIN	FAV
CD PAUSE	
CD STOP	 / SMART
CD REW	GREEN
CD PLAY	YELLOW
CD FWD	BLUE
DECK B REV PLAY	SHIFT+ VOL -
TUNER UP	SHIFT+ P+
TUNER DOWN	SHIFT+ P -
DECK B PLAY	SHIFT+UP
DECK B STOP	SHIFT+DOWN
DECK B REW	SHIFT+LEFT
DECK B FWD	SHIFT+RIGHT
DECK B PAUSE	SHIFT+OK
DECK A REV PLAY	SHIFT+BACK
DECK A PAUSE	SHIFT+ 
DECK A STOP	SHIFT+ 
DECK A REW	SHIFT+GREEN
DECK A PLAY	SHIFT+YELLOW
DECK A FWD	SHIFT+BLUE

