



ORIGINAL	SUPERIOR
ON	POWER
MUTING	MUTE
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
+10	-/--
DISPLAY	
PURE AUDIO	
SETUP	
THX	
VOL+	VOL+
VOL -	VOL -
CH/DISC/ALBUM+	P+
CH/DISC/ALBUM -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
STEREO	TV/DTV
DIMMER	INFO
SURR	EPG
OPEN/CLOSE	 / NET TV
PAUSE	

ORIGINAL	SUPERIOR
STOP	 / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
STANDBY	SHIFT+POWER
V1	SHIFT+1
V2	SHIFT+2
V3	SHIFT+3
V4	SHIFT+4
MULTI CH	SHIFT+5
DVD	SHIFT+6
CD	SHIFT+7
TAPE	SHIFT+8
TUNER	SHIFT+9
PHONO	SHIFT+0
REPEAT	SHIFT+BACK

