



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
CLR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
MODE	/ SOURCE
+10	-/--
DISPLAY	
ASPECT / ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
PRESET / SKIP NEXT	P+
PRESET / SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
RANDOM	TV/DTV
LAST MEMORY	INFO

ORIGINAL	SUPERIOR
MEMORY	EPG
TOP MENU	FAV
PAUSE	
STOP	/ SMART
REW / TUNING PREV	GREEN
PLAY	YELLOW
FWD / TUNING NEXT	BLUE
AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
LISTENING MODE	SHIFT+
SUBWOOFER LEVEL	SHIFT+
ANGLE	SHIFT+
RESOLUTION	SHIFT+
INPUT+	SHIFT+ P+
INPUT -	SHIFT+ P -
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP

