



ORIGINAL	SUPERIOR
ON / STANDBY	POWER
MUTING	MUTE
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SP. A/B	 / SOURCE
-/-- / +10 / DIMMER	-/--
DISPLAY	
D. TUN.	
SETUP	
VOL+	VOL+
VOL -	VOL -
PRESET NEXT	P+
PRESET PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
TUN. MODE	TV/DTV
M. GAME / RANDOM	RED
M. MOV./TV / SEARCH	GREEN
M. MUSIC / REPEAT	YELLOW
M. STEREO / PLAY M.	BLUE

[illegible]