



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
MENU	MENU
D.TUN/CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
>10	-/--
DISPLAY	
TONE/BAL	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP/PRESET NEXT	P+
SKIP/PRESET PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
RANDOM	TV/DTV
DIMMER	INFO
MEMORY	EPG
REPEAT	FAV
EJECT	/ NET TV

ORIGINAL	SUPERIOR
PAUSE	
STOP	/ SMART
REW/TUN -	GREEN
PLAY	YELLOW
FWD/TUN+	BLUE
CD	SHIFT+1
DIGITAL	SHIFT+2
LINE	SHIFT+3
TUNER	SHIFT+4
USB	SHIFT+5

