



ORIGINAL	SUPERIOR
	POWER
MENU	MUTE
QUICK MENU	MENU
BT PAIRING/INFO	EXIT
AUX	1
BD/DVD	2
BLUETOOTH	3
CBL/SAT	4
CD	5
GAME	6
NET	7
PC	8
PHONO	9
STRMBOX	0
TUNER	/ SOURCE
TV	-/--
MOVIE/TV	
MUSIC	
GAME	
VOL +	VOL +
VOL -	VOL -
SKIP NEXT	P +
SKIP PREV	P -
UP/TUNE +	UP

ORIGINAL	SUPERIOR
DOWN/TUNE -	DOWN
LEFT/PRESET -	LEFT
RIGHT/PRESET +	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
	TV/DTV
DIMMER	INFO
MEMORY	EPG
MODE	FAV
PLAY/PAUSE	YELLOW
VOCAL	SHIFT + MUTE
TREBLE	SHIFT + MENU
BASS	SHIFT + EXIT
TONE +	SHIFT + P +
TONE -	SHFIT + P -

