



ORIGINAL	SUPERIOR
POWER ON	POWER
MUTING	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECTOR DVD	/ SOURCE
+10	-/--
DISPLAY	
ZOOM	
ANGLE	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
SURROUND MODE	TV/DTV
SEARCH	INFO

ORIGINAL	SUPERIOR
MEMORY	EPG
DIMMER	FAV
OPEN / CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
POWER STANDBY	SHIFT+POWER
AUDIO	SHIFT+MUTE
VIDEO 1	SHIFT+1
VIDEO 2	SHIFT+2
TAPE	SHIFT+3
TUNER	SHIFT+4
INPUT SELECTOR TV	SHIFT+
RANDOM	SHIFT+ -/--
SETUP	SHIFT+
CHANNEL+	SHIFT+ P+
CHANNEL -	SHIFT+ P -
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
TITLE	SHIFT+INFO
SLOW	SHIFT+

