



ORIGINAL	SUPERIOR
POWER RECEIVER	POWER
MUTE	MUTE
HOME	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DIMMER	
SETUP	
VOL -/+	VOL -/+
DOWN / UP	DOWN / UP
LEFT / RIGHT	LEFT / RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
AUX	SHIFT+1
BD / DVD	SHIFT+2
CBL / SAT	SHIFT+3
GAME	SHIFT+4
NET	SHIFT+5
PORT	SHIFT+6
TUNER	SHIFT+7
TV / CD	SHIFT+8
USB	SHIFT+9
VCR / DVR	SHIFT+0
PC	SHIFT+ / AV
D. TUN.	SHIFT+ -/--

ORIGINAL	SUPERIOR
MOVIE / TV	SHIFT+RED
MUSIC	SHIFT+GREEN
GAME	SHIFT+YELLOW
THX	SHIFT+BLUE
USB	
SKIP PREV/NEXT	P -/+
PAUSE	
STOP	
REW	GREEN
PLAY	YELLOW
FWD	BLUE
MENU	SHIFT+MENU
TOP MENU	SHIFT+EXIT
DISPLAY	SHIFT+
SETUP	SHIFT+
DOWN / UP	SHIFT+ DOWN/UP
LEFT / RIGHT	SHIFT+ LEFT/RIGHT
ENTER	SHIFT+OK
RETURN	SHIFT+BACK
REPEAT	SHIFT+SLEEP
RANDOM	SHIFT+INFO
SEARCH	SHIFT+EPG
MODE	SHIFT+FAV

