



ORIGINAL	SUPERIOR
ON	POWER
MUTING	MUTE
SETUP	MENU
RETURN / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
ZONE 2	 / SOURCE
+10	-/--
DISPLAY	
STEREO	
SURR.	
TEST TONE	
VOL+	VOL+
VOL -	VOL -
CH/DISC +	P+
CH/DISC -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
SLEEP	SLEEP
MULTI CH.	TV/DTV
DIMMER	INFO

ORIGINAL	SUPERIOR
MEMORY	EPG
ALL ST.	FAV
OPEN / CLOSE	 / NET TV
PAUSE	 / SMART TUBE
STOP	 / SMART VIDEO
REW	GREEN
PLAY	YELLOW
FWD	BLUE
STANDBY	SHIFT+POWER
PURE A.	SHIFT+MUTE
V. 1/2/3/4	SHIFT+ 1/2/3/4
CD	SHIFT+5
DIRECT	SHIFT+6
DVD	SHIFT+7
TAPE	SHIFT+8
TUNER	SHIFT+9
TV	SHIFT+0
CH. SEL.	SHIFT+ -/--
LEVEL+	SHIFT+ VOL+
LEVEL -	SHIFT+ VOL -
DSP PREV.	SHIFT+LEFT
DSP NEXT	SHIFT+RIGHT
L. NIGHT	SHIFT+SLEEP

