



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
PIP	
PIP SWAP	
PIP S. LIST	
/ TELETEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
FAV	FAV
INFO	INFO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE

ORIGINAL	SUPERIOR
EPG	EPG
/ SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
/ PAGE UP	SHIFT+UP
/ PAGE DOWN	SHIFT+DOWN
RECALL	SHIFT+BACK
TV / RAD	SHIFT+TV/DTV
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

