



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ AV
UHF	-/--
SAT	
ZOOM	
V. FORMAT	
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RECALL	BACK
	SLEEP
TV / SAT	TV/DTV
i	INFO
EPG	EPG
FAV	FAV
RED / / PIP	RED
GREEN / /	GREEN

ORIGINAL	SUPERIOR
YELLOW / /	YELLOW
BLUE / /	BLUE
?	SHIFT+MUTE
/ FIND	SHIFT+EXIT
F1	SHIFT+1
F2	SHIFT+2
	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
P+	SHIFT+UP
P-	SHIFT+DOWN
SLOW	SHIFT+SLEEP
/	SHIFT+TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

