



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HD	/ SOURCE
LIST	-/--
PORTAL	
V. SIZE	
SUBT.	
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
i	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
DELAY	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
TIMER	SHIFT+POWER
AUDIO	SHIFT+MUTE
MEDIA	SHIFT+6
SAT	SHIFT+7
REC. LIST	SHIFT+ -/--
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAGE DOWN	SHIFT+DOWN
PAGE UP	SHIFT+UP
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

