



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	/ SOURCE
SEARCH	-/--
DISPLAY	
ZOOM	
SUBTITLE	
TELETEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
SAT	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
MODE	SHIFT+MENU
F1	SHIFT+1
F2	SHIFT+2
F3	SHIFT+3
F4	SHIFT+4
F5	SHIFT+5
PAGE+	SHIFT+UP
PAGE -	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
TIME	SHIFT+SLEEP
TV / R	SHIFT+TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

