



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
M/P	
SWAP	
TTX	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP / CH+	UP
DOWN / CH -	DOWN
LEFT / VOL -	LEFT
RIGHT / VOL+	RIGHT
OK	OK
RECALL	BACK
TV/RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED	RED
GREEN	GREEN

ORIGINAL	SUPERIOR
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
SUB	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

