



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	/ AV
SAT	-/--
DISPLAY	
FIND	
TEXT	
V+	VOL+
V-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
RED / MEDIA	RED
GREEN / NETWORK	GREEN
YELLOW / YOUTUBE	YELLOW
BLUE / WEATHER	BLUE
AUDIO	SHIFT+MUTE
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
PAGE+	SHIFT+UP
PAGE-	SHIFT+DOWN
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

