



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / 	0
UHF	/ SOURCE
	-/--
/ FIND	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
	SLEEP
TV / STB	TV/DTV
i	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
WHITE / P/N	
RED / PIP	RED
GREEN / 	GREEN
YELLOW / 	YELLOW
BLUE	BLUE
?	SHIFT+MUTE
SAT	SHIFT+7
P -	SHIFT+DOWN
P+	SHIFT+UP
	SHIFT+LEFT
	SHIFT+RIGHT
TMS	SHIFT+SLEEP
/	SHIFT+ TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

