



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
 / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
EXT.	 / SOURCE
TV / RADIO	-/--
 / OPT.	
TXT	
VOL+	VOL+
VOL -	VOL -
PROG+	P+
PROG -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
TV/SAT	TV/DTV
i / INFO	INFO
EPG/SFI	EPG
A/B	FAV
SAT1 + OK	 / NET TV
STOP	 / SMART

[illegible]