


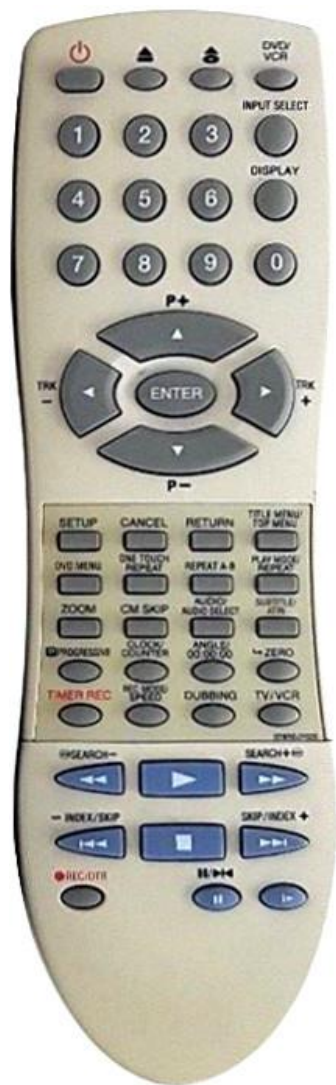

ORIGINAL	SUPERIOR
	POWER
DVD MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ AV
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
BACK	BACK
TV / DVD	TV/DTV
PLAY MODE	FAV
EJECT	
PAUSE 1	
STOP 1	
REC	RED
REW	GREEN

ORIGINAL	SUPERIOR
PLAY 1	YELLOW
FWD	BLUE
TIMER REC	SHIFT+POWE
AUDIO	SHIFT+MUTE
TOP MENU	SHIFT+EXIT
DVD / VCR	SHIFT+AV
ANGLE	SHIFT+
DUBBING	SHIFT+
TRK.+	SHIFT+UP
TRK.-	SHIFT+DOWN
SLOW	SHIFT+LEFT
SKIP FORWARD	SHIFT+RIGHT
SKIP LEFT	SHIFT+ P-
SKIP RIGHT	SHIFT+ P+
REPEAT	SHIFT+BACK
REPEAT A-B	SHIFT+SLEEP
TV / VCR	SHIFT+TV/DTV
OPEN/CLOSE	SHIFT+
PAUSE 2	SHIFT+
STOP 2	SHIFT+
PLAY 2	SHIFT+YELLOW

