



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
ADD / CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / AV
TIMESHIFT	-/--
DISPLAY	
GOTO	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
SELECT	OK
P <-> P / RETURN	BACK
TIMER	SLEEP
DV / USB	TV/DTV
NAVIGATOR	INFO

ORIGINAL	SUPERIOR
REC TO	EPG
SORT / SLOW	FAV
EJECT	
PAUSE / STEP	
STOP	
REC / OTR	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
DVD	SHIFT+1
HDD	SHIFT+2
ZOOM	SHIFT+ 
CH+	SHIFT+ P+
CH-	SHIFT+ P-
REPEAT	SHIFT+BACK
PS / IS	SHIFT+TV/DTV

