



ORIGINAL	SUPERIOR
	POWER
AUDIO	SHIFT+MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ SOURCE
DRIVE SELECT	-/--
DIRECT NAVI POPUP	
RECORD MODE	
OPTION	
TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
LAST VIEW	SHIFT+BACK
TV RADIO	TV/DTV
INFO STATUS	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
CHAPTER	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
MANUAL SKIP +60S	SHIFT+1
MANUAL SKIP -10S	SHIFT+2
SKYPE	SHIFT+
PROG CHECK	SHIFT+
SUBTITLE STTL	SHIFT+
FUNCTION MENU	SHIFT+MENU
DELETE	SHIFT+EXIT
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE
INTERNET	SHIFT+EPG
TIME SLIP	SHIFT+FAV

