



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
FUNCTION MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ SOURCE
DEL	-/--
DISPLAY	
DIRECT TV NAVIGATOR	
VIERA CAST	
/ TEXT	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RETURN	BACK
TIME SLIP	SLEEP
EXT LINK	TV/DTV
i / STATUS	INFO
PROG. / CHECK	EPG
DIRECT TV REC	FAV

ORIGINAL	SUPERIOR
REC MODE	/ NET TV
PAUSE	
STOP	/ SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
OPTION	SHIFT+MENU
DRIVE SELECT	SHIFT+
GUIDE	SHIFT+ -/--
CHAPTER	SHIFT+
/ STTL	SHIFT+
PAGE/CH UP	SHIFT+UP
PAGE/CH DOWN	SHIFT+DOWN
MANUAL SKIP -10s	SHIFT+LEFT
MANUAL SKIP +60s	SHIFT+RIGHT
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE

