



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
DIR. NAV. / POP-UP M.	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ AV
EXT. LINK	-/--
S / SKYPE	
OPTION	
/ STTL.	
/ TEXT	
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT / STEP BACK	LEFT
RIGHT / STEP FWD	RIGHT
OK	OK
BACK / RETURN	BACK
TIME SLIP	SLEEP
DIRECT TV REC.	TV/DTV
i / STATUS	INFO
GUIDE	EPG
CHAPTER	FAV

ORIGINAL	SUPERIOR
PAUSE	
STOP	
REC	RED
SLOW/SEARCH REW	GREEN
PLAY / x1.3	YELLOW
SLOW/SEARCH FWD	BLUE
FUNCTION MENU	SHIFT+MENU
DEL.	SHIFT+EXIT
DRIVE SELECT	SHIFT+AV
CH/PAGE -	SHIFT+ P-
CH/PAGE +	SHIFT+ P+
MANUAL SKIP - -10s	SHIFT+LEFT
MANUAL SKIP - +60s	SHIFT+RIGHT
REC. MODE	SHIFT+ TV/DTV
PROG. / CHECK	SHIFT+EPG
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE

