



ORIGINAL	SUPERIOR
POWER	POWER
SUB-MENU	MENU
TOP MENU/DIR. NAV.	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	 / SOURCE
EXTERNAL LINK	-/--
SHOW VIEW	
FUNCTIONS	
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
TIME SLIP	SLEEP
INFO	INFO
GUIDE	EPG
DRIVE SELECT	FAV
RED/DISPLAY	RED
GREEN/STATUS	GREEN
YELLOW/CREATE CH.	YELLOW
BLUE/ERASE	BLUE

ORIGINAL	SUPERIOR
TIMER	SHIFT+POWER
AUDIO	SHIFT+MUTE
*/CANCEL	SHIFT+EXIT
DVD	SHIFT+1
HDD	SHIFT+2
SD	SHIFT+3
MANUAL SKIP	SHIFT+RIGHT
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
DIRECT TV REC.	SHIFT+TV/DTV
DUBBING	SHIFT+INFO
PROG/CHECK	SHIFT+EPG
FLEXIBLE REC.	SHIFT+FAV
REC. MODE	SHIFT+ 
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

