



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	 / SOURCE
SHIFT	-/--
FL DISPLAY	
ZOOM	
SPEAKER TOGGLE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+ / PRESET NEXT	P+
CH - / PRESET PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
EQUALIZER	EPG
DISC SELECTION +	FAV

ORIGINAL	SUPERIOR
SURROUND ON	RED
PRO LOGIC	GREEN
SUB – WOOFER	YELLOW
DISC MANAGER	BLUE
AUDIO	SHIFT+MUTE
SETUP	SHIFT+MENU
TOP MENU	SHIFT+EXIT
DISC 1/2/3/4/5	SHIFT+1/2/3/4/5
DISC NEXT	SHIFT+UP
SEAT POSITION	SHIFT+DOWN
PROGRESSIVE SCAN	SHIFT+RIGHT
ENTER	SHIFT+OK
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
EJECT	SHIFT+ 
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

