

ORIGINAL	SUPERIOR
 DVD	POWER
AUDIO	MUTE
TOP MENU / DIR. NAV.	MENU
EXT. LINK	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
OUTPUT DVD	 / SOURCE
≥10	-/--
DISPLAY	
ZOOM	
ANGLE / PAGE	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
 / TIMER	SLEEP
MUSIC / w/PICTURE	TV/DTV
POSITION MEMORY	EPG
PLAY LIST	FAV
PAUSE / STEP	 / SMART TUBE

ORIGINAL	SUPERIOR
STOP	 / SMART VIDEO
REC. CHECK	RED
SLOW/SEARCH REW	GREEN
PLAY	YELLOW
SLOW/SEARCH FWD	BLUE
CH/TRK/V – LOCK -	SHIFT+DOWN
CH/TRK/V – LOCK+	SHIFT+UP
QUICK REPLAY	SHIFT+LEFT
REPEAT	SHIFT+BACK
PLAY MODE	SHIFT+FAV
A / CANCEL/RESET	SHIFT+RED
B / CINEMA	SHIFT+GREEN
C / GROUP	SHIFT+YELLOW
D / SETUP	SHIFT+BLUE
TV	
 TV	SHIFT+POWER
1/2/3/4/5	SHIFT+1/2/3/4/5
6/7/8/9/0	SHIFT+6/7/8/9/0
AV / INPUT SELECT	SHIFT+ 
-/--	SHIFT+ -/--
A	SHIFT+ 
B	SHIFT+ 
C	SHIFT+ 
D	SHIFT+ 

[illegible]