



ORIGINAL	SUPERIOR
 VCR	POWER
AUDIO	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / INPUT SELECT	 / SOURCE
-/--	-/--
DISPLAY	
TV ASPECT	
SHOWVIEW	
INDEX NEXT	P+
INDEX PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
 / TIMER	SLEEP
MUSIC / w/PICTURE	TV/DTV
PROG. / CHECK	EPG
REC. CHECK	FAV
PAUSE / STEP	 / SMART TUBE
STOP	 / SMART VIDEO
REC	RED

[illegible]