



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
MENU / PLAY LIST	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV/AV	/ SOURCE
CH. SELECT - TEST	-/--
FL DISPLAY - DIMMER	
ZOOM	
FM MODE – SETUP	
SUBWOOFER LEVEL	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
DOLBY PL.	TV/DTV
GROUP	INFO

ORIGINAL	SUPERIOR
POSITION MEMORY	EPG
S. SRND.	FAV
PAUSE	
STOP	/ SMART
SLOW/SEARCH REW	GREEN
PLAY	YELLOW
SLOW/SEARCH FWD	BLUE
AUDIO	SHIFT+MUTE
TOP MENU / DIR. NAV.	SHIFT+MENU
VCR / AUX	SHIFT+1
DVD / CD	SHIFT+2
TUNER / BAND	SHIFT+3
TV	SHIFT+4
2nd ENTER	SHIFT+OK
REPEAT	SHIFT+BACK
C. FOCUS	SHIFT+INFO
SFC	SHIFT+EPG
C.S.M.	SHIFT+FAV
PLAY MO. – MIX 2 CH.	SHIFT+YELLOW

