



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
>10	-/--
DISPLAY	
SUBWOOFER LEVEL	
CENTER FOCUS	
OSD	
VOLUME+	VOL +
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
ACTION	SLEEP
FM MODE	TV/DTV
CH SELECT	INFO
POSITION MEMORY	EPG

[illegible]