



ORIGINAL	SUPERIOR
 / DVD	POWER
AUDIO	MUTE
MENU / PLAY LIST	MENU
CANCEL / RESET	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD	 / SOURCE
>=10	-/--
DVD STATUS	
MANUAL SKIP	
QUICK OSD	
QUICK REPLAY	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN / EXIT	BACK
DIR. NAV. / TOP MENU	TV/DTV
DVD RAM / DUBBING	INFO
PLAY MODE	EPG
FUNCTIONS	FAV
PAUSE / STEP	

[illegible]