



ORIGINAL	SUPERIOR
⏻ / VHS	POWER
AUDIO	MUTE
MENU / PLAY LIST	MENU
CANCEL / RESET	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
VHS	📺 / SOURCE
-/--	-/--
VHS STATUS	📺
CINEMA MODE	📺
OFF TIMER	📺
EXT LINK	📺
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN / EXIT	BACK
🕒 / TIMER	SLEEP
INPUT	TV/DTV
DVD RAM / DUBBING	INFO
PLAY MODE	EPG
PROG. / CHECK	FAV

ORIGINAL	SUPERIOR
REC MODE	⬆ / NET TV
PAUSE / STEP	⏸
STOP	⏹ / SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SETUP	SHIFT+ 📺
CH+	SHIFT+ P+
CH -	SHIFT+ P -
REPEAT	SHIFT+BACK
I - TIMER	SHIFT+SLEEP
TV CONTROL	
⏻	SHIFT+POWER
AV	SHIFT+ 📺
VOLUME+	SHIFT+VOL+
VOLUME -	SHIFT+ VOL -
CH+	SHIFT+UP
CH-	SHIFT+DOWN

