



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
MENU / PLAY LIST	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DOLBY PL. II	/ AV
-/-- / >10	-/--
DISPLAY / TV VOL-	
SFC	
PAGE	
SUBWOOFER LEVEL	
VOL -/+	VOL -/+
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN / TV VOL+	BACK
SLEEP	SLEEP
TV VIDEO	TV/DTV
SUPER SRND.	INFO
POSITION MEMORY	EPG

ORIGINAL	SUPERIOR
GROUP	FAV
PAUSE	
STOP	
SLOW/SEARCH REW	GREEN
PLAY	YELLOW
SLOW/SEARCH FWD	BLUE
AUDIO	SHIFT+MUTE
TOP MENU / DIR. NAV.	SHIFT+MENU
DVD / CD	SHIFT+1
TUNER / BAND	SHIFT+2
TV / AV	SHIFT+3
VCR / AUX	SHIFT+4
CH. SELECT	SHIFT+ -/--
FL DISPLAY	SHIFT+
ZOOM	SHIFT+
SETUP	SHIFT+
SUBTITLE	SHIFT+
DOWN MIXING	SHIFT+DOWN
QUICK REPLAY	SHIFT+LEFT
C. FOCUS	SHIFT+OK
CH -/+	SHIFT+ P -/+
REPEAT	SHIFT+BACK
TEST	SHIFT+INFO
C. S. M.	SHIFT+EPG
PLAY MODE	SHIFT+YELLOW

