



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
MENU/PLAY LIST	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
>10	-/--
D.RE. MASTER	
ZOOM	
SETUP	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
PL	SLEEP
REPLAY	TV/DTV
DIMMER	INFO
SOUND EQ	EPG

[illegible]