



ORIGINAL	SUPERIOR
	POWER
	MUTE
INTRO	MENU
DEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AUX	 / SOURCE
>10	-/--
DISPLAY	
SURROUND	
VOL +	VOL +
VOL -	VOL -
FF / SKIP NEXT	P +
REW / SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
SLEEP	SLEEP
TUNER/BAND	TV/DTV
DIMMER	INFO
PROGRAM	EPG
MARKER	FAV

[illegible]